

Yealink Meeting Server Quick Start Guide-for User

Applies to Version 21.0.0.10 or later

Introduction

The users can read this guide to schedule conferences, join conferences, and control conferences.


Logging into YMS

- 1. Open a web browser.
- 2. Enter the domain name or the IP address of YMS in the address bar to go to the Login page of YMS. Follow the steps in the picture below to log in.

Yealink 220 亿联视频会议管理平台		Outlook plug-in download English Y Join From Browser
	User Login AD Login	
	2551	You can use YMS accounts or AD accounts to log in. Get the account information
4	Log In Forgot Password Admin Login>>	from the administrator.
D	ownload Center	
Сору	Windows Mac	served V2.24

Scheduling Conferences

The participants can receive the conference invitation emails, they can also receive the conference notification on their VCS, SIP-T49G, Yealink VC Mobile&Desktop and so on.

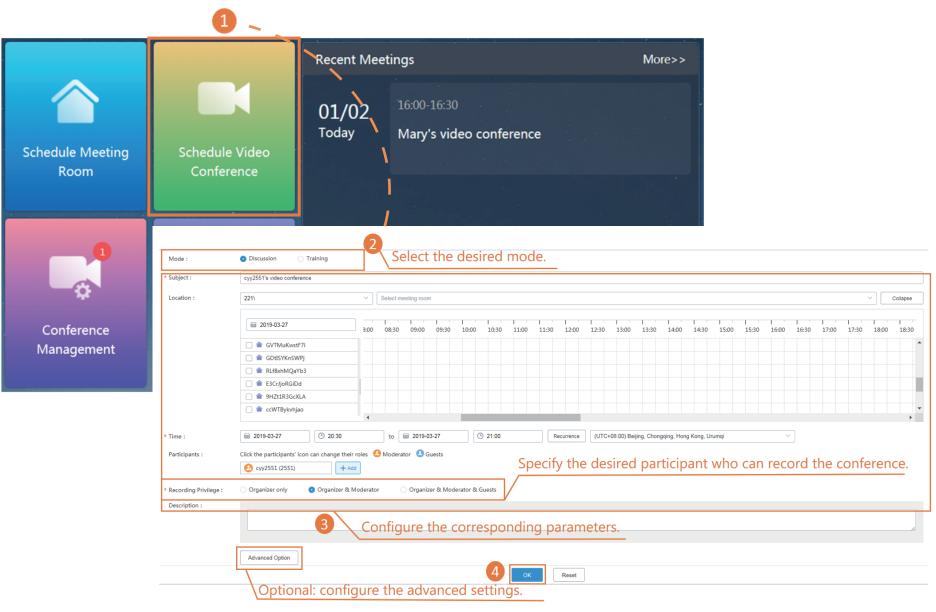

Joining Conferences

Do one of the following:

- Join conferences by logging into YMS accounts on Yealink devices.
 - The supported devices are: PVT950/PVT980, VC880/VC800/VC500/VC400/VC200/VC120/VC110, CP960 conference phone, SIP-T49G/SIP-T58V/VP59 phone, and Yealink VC Mobile&Desktop.
- Join conferences via the YMS web app.

VCS

Take the VC800 videoconferencing system as an example, you can follow the steps below to join the confernece.

Logging into YMS


1. On your remote control, navigate to More->Setting->Advanced (the default password is admin)->Video Conference

Platform.

Follow the steps in the picture below to log in.



Joining the Conference from the Schedule

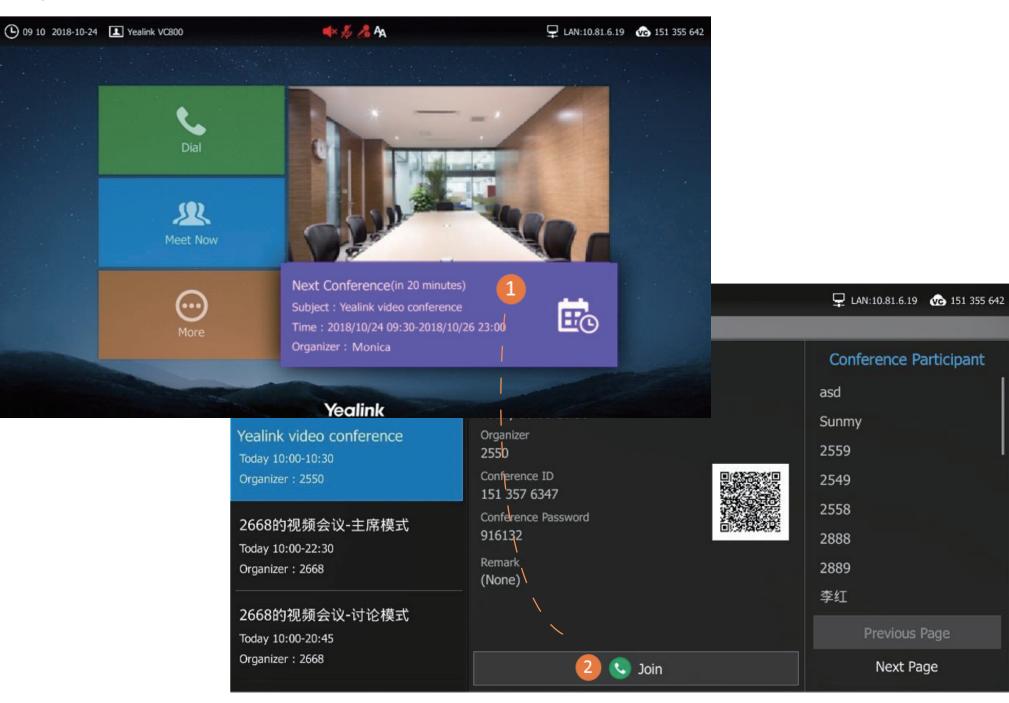

VC Desktop & VC Mobile

Take the Yealink VC Desktop for Windows as an example, you can join the conference by the following steps.

Logging into YMS



	Cloud Account	Cloud Account	
₽	Basic Settings	3	Yealink Meeting Server 🔍
6	Manual bind	-	👤 2229 👻
Ġ	Call Functions		A
۲	H.323 Registration	4	10.83.1.205.xip.io
SIP	SIP Registration	•	Remember password
SIP	SIP IP Call		Advanced Options 10.83.1.205
Dj	Device		10.05.1.205
(\$)	Network	5	Login

Joining the Conference from the Calendar



SIP VP-T49G Phone

You can join the conference by the following steps.

Logging into YMS

1. Click 🔡 -> Advanced (the default password is admin)-> VC Account.

Follow the steps in the picture below to log in.

To Service	Account 1	20:02 Fri, Mar 29
Account	Type 2	Yealink Meeting Server
🐵 VC Account	Account 3	5642
Network	Password	•••••
Phone Lock	Server	10.83.1.221.xip.io
Set Password	Remember the Password	
Set AES Key	Advanced Settings	
2 Auto Provision 4	Outbound Proxy Server	10.83.1.221
5 5	E.	*

Joining the Conference from the Schedule




	0					
		ct 20	18			Today
		Wed		Fri	Sat	Yealink video conference 10:00-22:30 Ongoing Organizer : 2668 Join Details
8	9	10	11	12	13	Yealink video conference 10:00-20:45 Ongoing Organizer : 2668 Join Details
15	16	17	18	19	20	Yealink video conference
22	23	24	25	26	27	10:30-20:30 Ongoing Organizer : 2668 Join Details
29	30	31	1	2	3	Yealink video conference 14:45-19:15 Ongoing Organizer : 2668 Join Details
5	6	7	8	9	10	Yealink video conference Is:00-20:00 Oncoine
_						
	15 22	8 9 15 16 22 23 29 30	8 9 10 15 16 17 22 23 24 29 30 31	8 9 10 11 15 16 17 18 22 23 24 25 29 30 31 1	8 9 10 11 12 15 16 17 18 19 22 23 24 25 26 29 30 31 1 2	8 9 10 11 12 13 15 16 17 18 19 20 22 23 24 25 26 27 29 30 31 1 2 3





YMS Web App

ϔ The supported browsers are: Google Chrome version 52 or later, Firefox version 52 or later, and 360 version 9.1 or later.

- 1. Open a web browser.
- 2. Enter https://YMS IP address/meeting/join/#/login in the address bar to visit the Home page of YMS web app. Follow the steps in the picture below to join the conference.

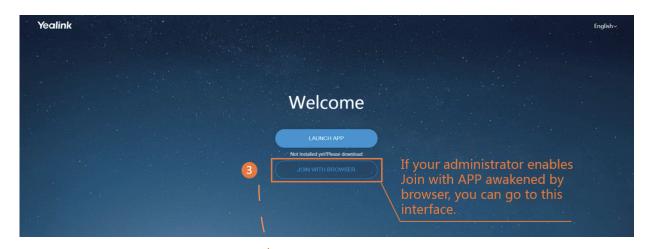


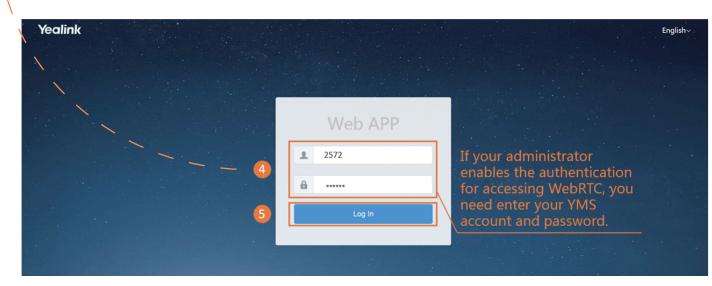

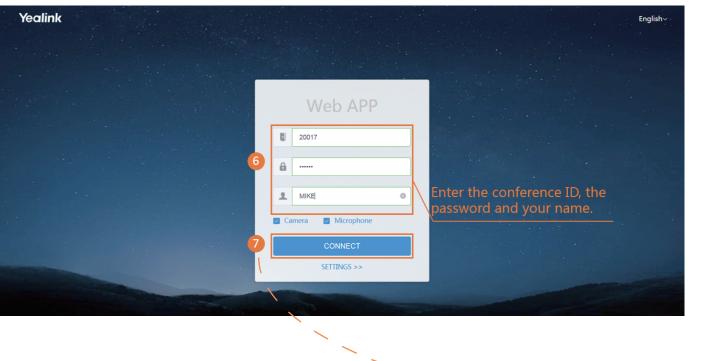

Video and Audio Preview


Camera

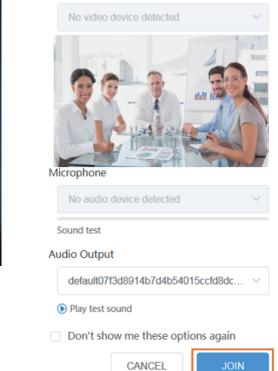

Controlling Video Conferences


Controlling Conferences

If you have the ongoing or upcoming conferences, you can follow the steps in the picture below to control the conferences.

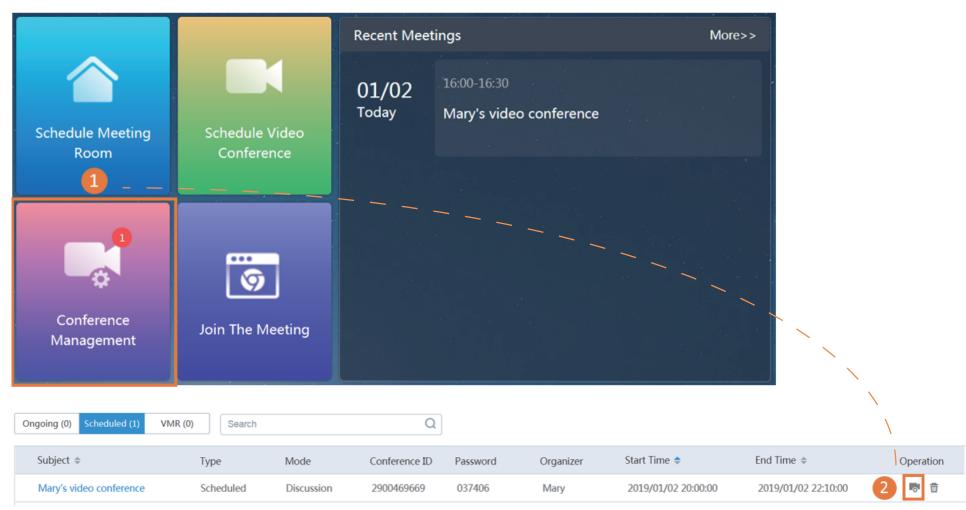


Controlling Conferences

If you are the moderator in the conferneces, you can control the conferences. The details are described as below.

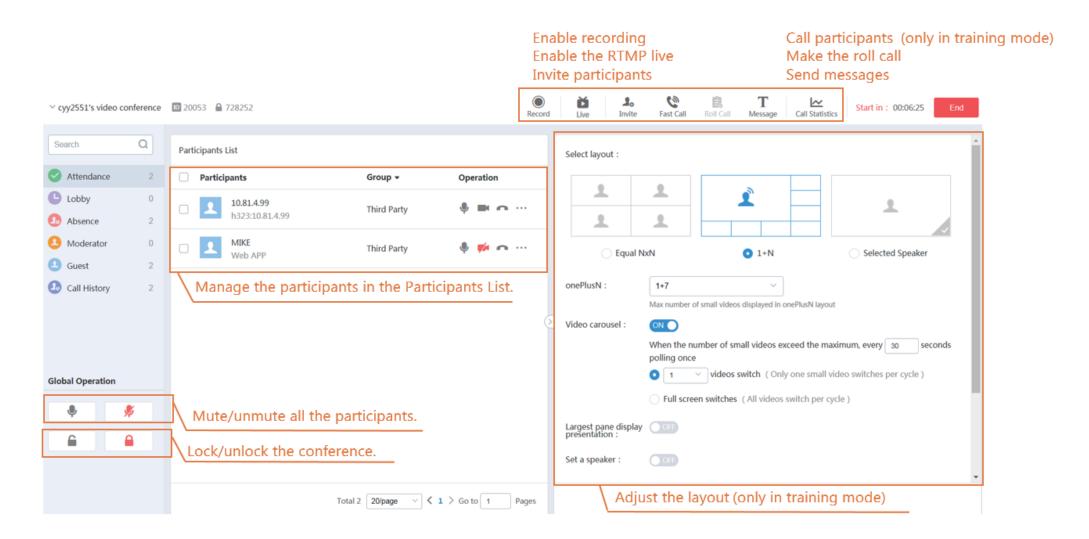

Enabling RTMP Live

Click Live on the Conference Control page, and you can share the link with others, so they can watch the live broadcast of the conference.

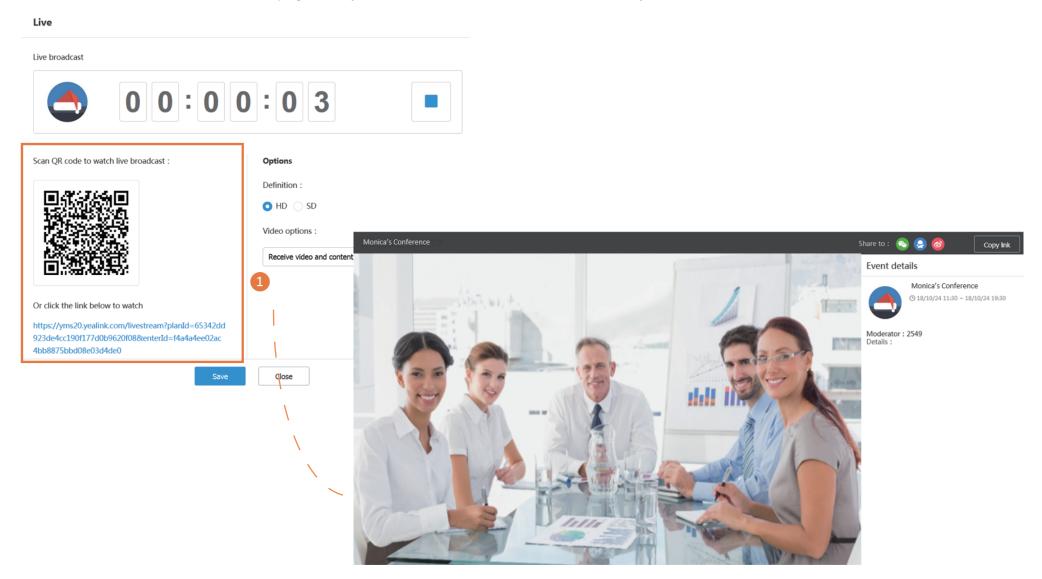

For more information about YMS, visit https://www.yealink.com.cn/.